

	Tandem Pantry Installation 4501					
No.	Image	Qty.	No.	Image	Qty.	
1		1 Pc.	2		1 Pc.	
3		1 Pc.	4		1 Set.	
5		1Pc.	6		1 Pc.	
7		2 Pc.	8	TCC CO	22 Pc.	
9		2 Pc.	10		Layer x 2	
11		2 Pc.	12	Basket Hook (Optional)	12 set.	
13	Allen Key			1	1 Pc.	
414 mm						


Cabinet Inner Height		
6 Layer	2050 mm	
5 Layer	1600 mm	
4 Layer	1300 mm	

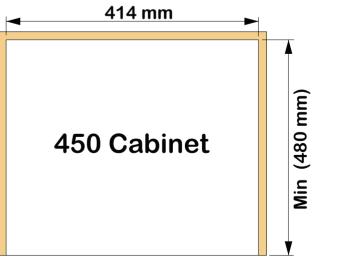


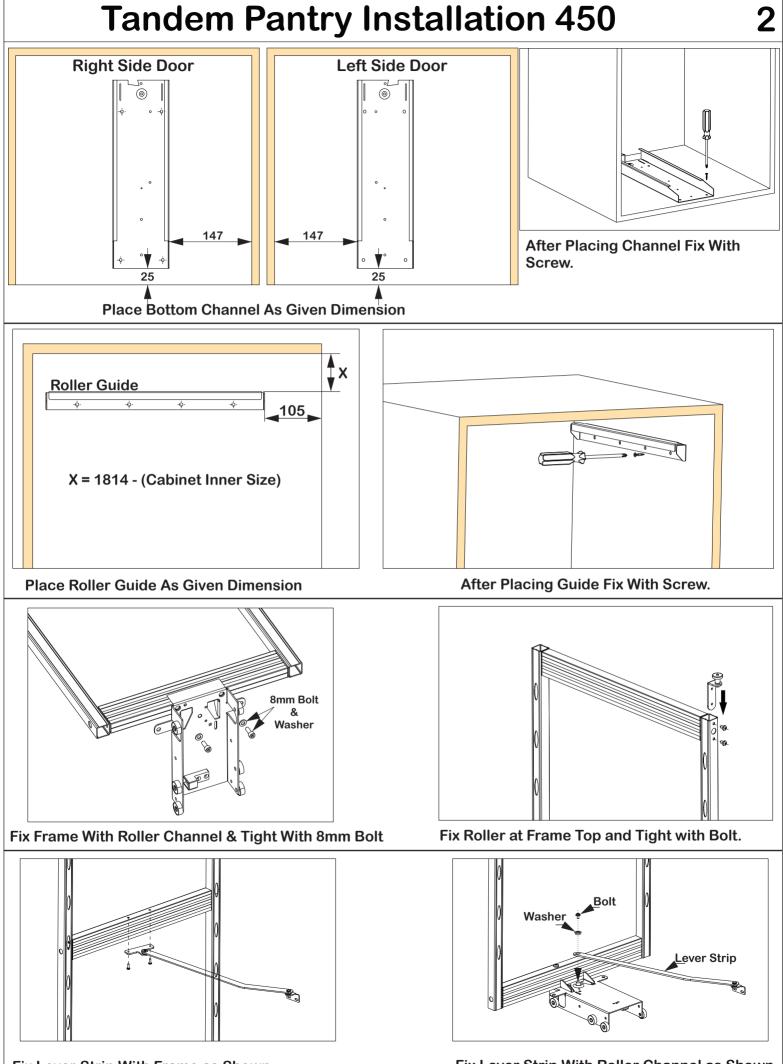


Fix Lever Strip With Frame as Shown.


Fix Lever Strip With Roller Channel as Shown

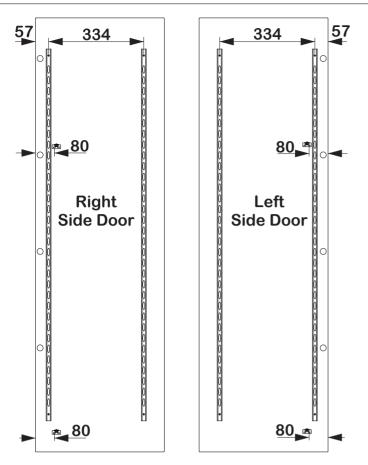

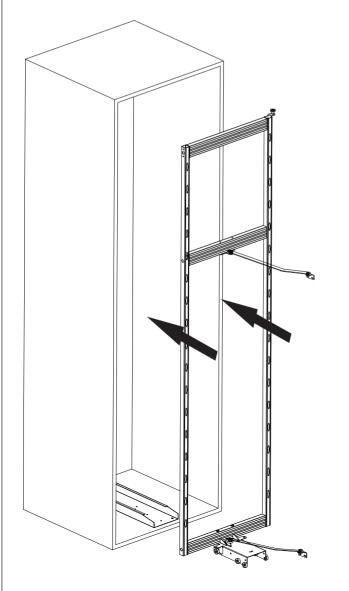


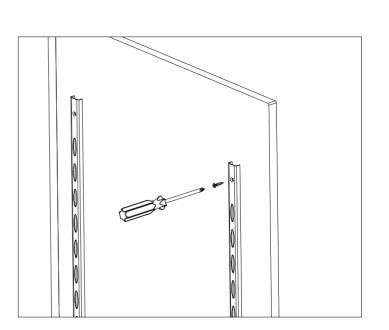


Fix Shutter Strip As Given Dimension & Screw With Shutter

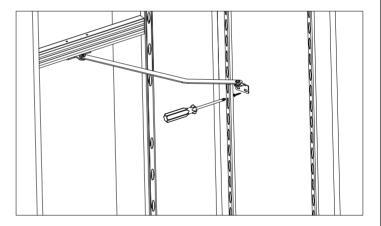

Insert Frame into the Cabinet & Fix Lever Attachment With Shutter As Given Dimension.

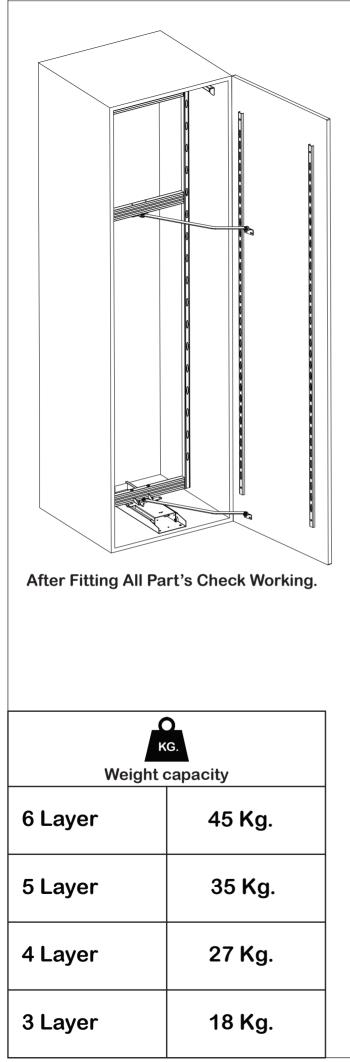


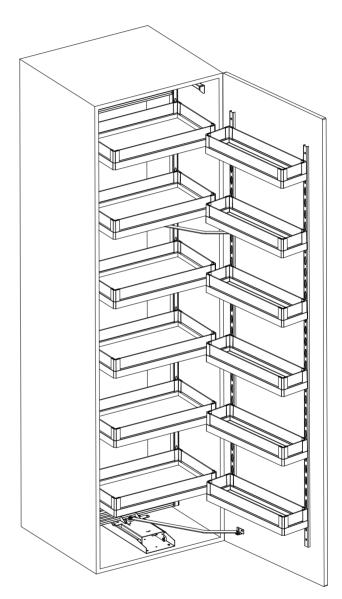


Fix Basket According To your Need.

	Tandem Pantry Installation 6001					
No.	Image	Qty.	No.	Image	Qty.	
1		1 Pc.	2		1 Pc.	
3		1 Pc.	4		1 Set.	
5		1Pc.	6		1 Pc.	
7		2 Pc.	8	TCCC (JS)	22 Pc.	
9		2 Pc.	10		Layer x 2	
11		2 Pc.	12	Basket Hook (Optional)	12 set.	
13	Allen Key				1 Pc.	


<b>Cabinet Inner Height</b>		
6 Layer	2050 mm	
5 Layer	1600 mm	
4 Layer	1300 mm	

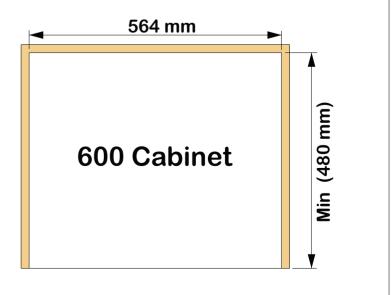


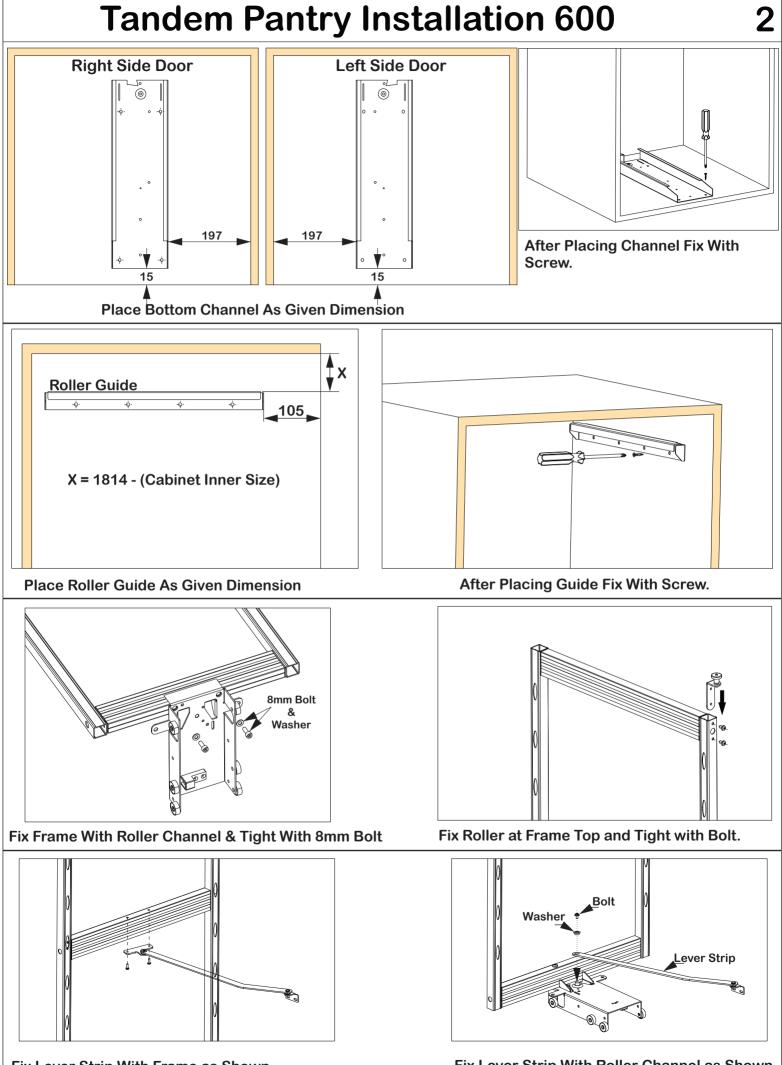


Fix Lever Strip With Frame as Shown.


Fix Lever Strip With Roller Channel as Shown

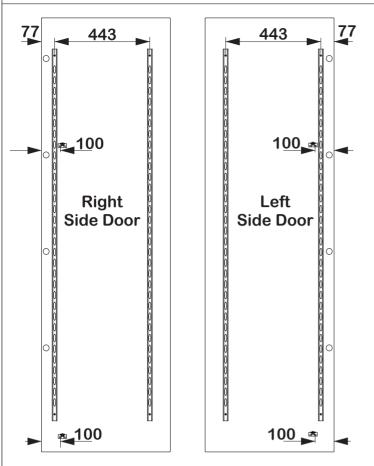

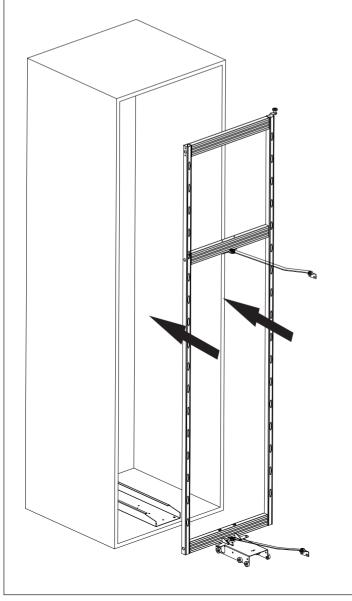


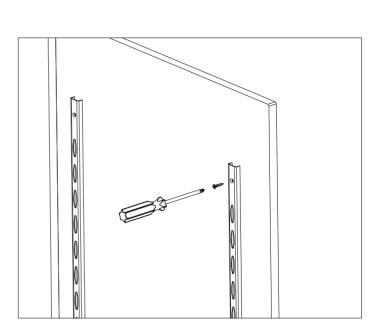


Fix Shutter Strip As Given Dimension & Screw With Shutter

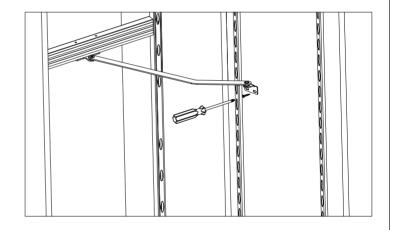

Insert Frame into the Cabinet & Fix Lever Attachment With Shutter As Given Dimension.

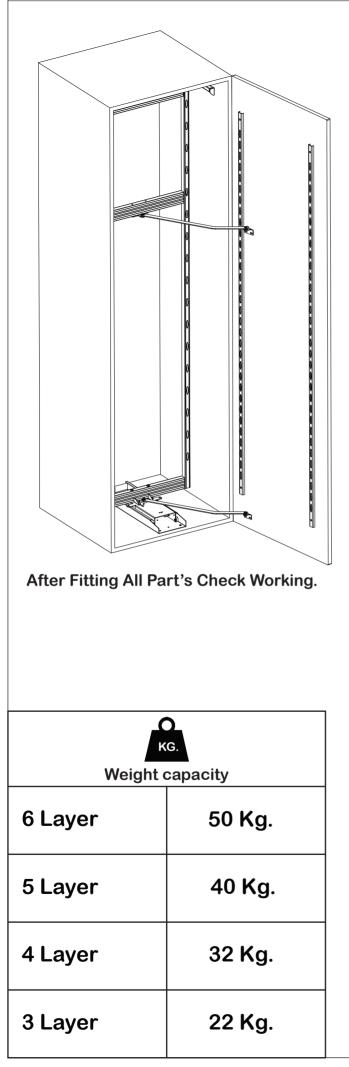

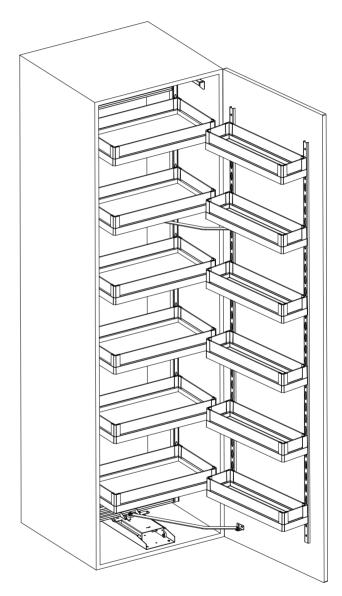

Fix Basket According To your Need.